


D-Link® Technical Support Setup Procedure

How to Change the Wireless Channel on the DVG-N5402SP


Step 1: Open a web browser such as Internet Explorer, Mozilla Firefox, Safari and etc. On the Address bar type in the LAN IP Address of the DVG-N5402SP which is **192.168.0.1** and then press on the Enter key on your keyboard.



Step 2: A login screen will appear, type in the User Name as "admin" and the Password as "password" all in lower case and then click on the **Log In** button.

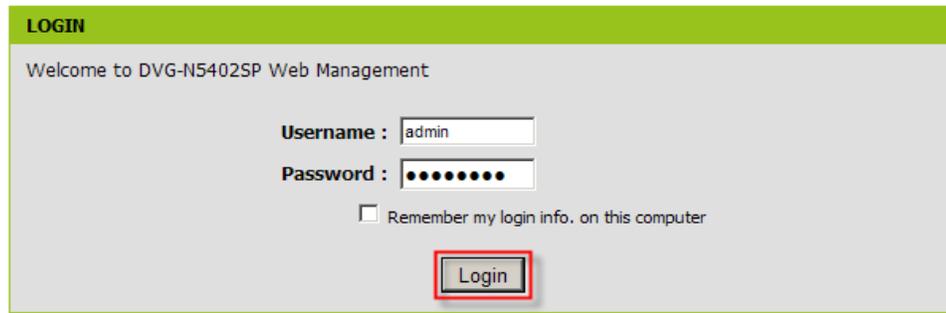

Step 3: Click on the **SETUP** tab and then select on **Wireless Setup** button on the left hand side. Under the **WIRELESS SETTINGS – WIRELESS BASIC** section, click on the **Wireless Basic** button.

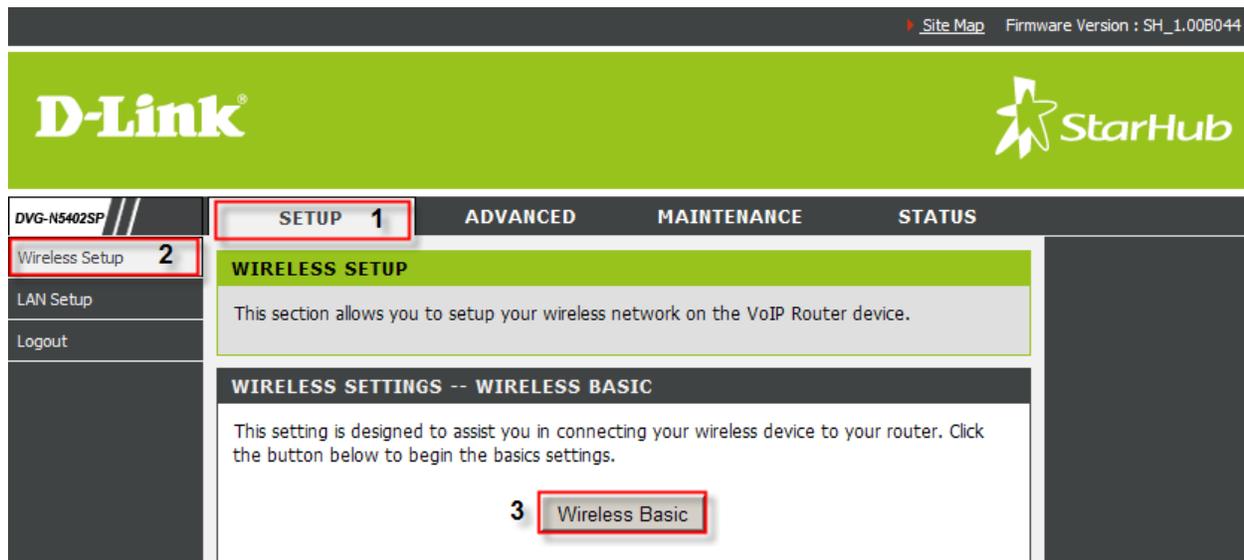

Step 4: Under the **WIRELESS NETWORK SETTINGS** section, select the desired channel under the drop down menu for **Wireless Channel**.

WIRELESS NETWORK SETTINGS

Enable Wireless LAN Interface

Wireless Network Name (SSID) : DVG-N5402SP-fc445f

Visibility Status : Visible Invisible

Country : Singapore

802.11 Mode : Mixed 802.11b/g/n

Band Width : 20M

Wireless Channel : Auto Scan(recommended)

User Isolation :

Please take note of your SSID as you will need to duplicate the same settings to your wireless devices and PC.

Apply

Copyright © 2005-2011 Link Systems, Inc.

The 'Wireless Channel' dropdown menu is expanded, showing the following options:

- Auto Scan(recommended)
- 2.412GHz - CH1
- 2.417GHz - CH2
- 2.422GHz - CH3
- 2.427GHz - CH4
- 2.432GHz - CH5
- 2.437GHz - CH6
- 2.442GHz - CH7
- 2.447GHz - CH8
- 2.452GHz - CH9
- 2.457GHz - CH10
- 2.462GHz - CH11
- 2.467GHz - CH12
- 2.472GHz - CH13

Step 5: Click on the **Apply** button to save the settings.

Please take note of your SSID as you will need to duplicate the same settings to your wireless devices and PC.

Apply Cancel