

How to enable loopback detection

1. Login to switch




Connect to 10.90.90.90


Enter your password

Password

2. L2 Features > Loopback detection

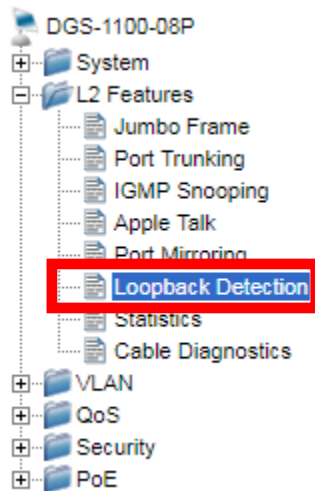

 3. Enable loopback detection and apply



Loopback Detection Enabled Disabled

Time Interval (1~32767) sec(s)

Recover Time (0 or 60~1000000) sec(s)

D-Link[®] Technical Support Setup Procedure

4. Enable all port and apply

From Port	To Port	State	Apply	Refresh
01	08	Enabled		

Port	Loopback Detection State	Loop Status
1	Disabled	Normal
2	Disabled	Normal
3	Disabled	Normal
4	Disabled	Normal
5	Disabled	Normal
6	Disabled	Normal
7	Disabled	Normal
8	Disabled	Normal

5. Save configuration

Save	Tools
Save Configuration	