



## How to set RSTP on switch


1. Access to switch

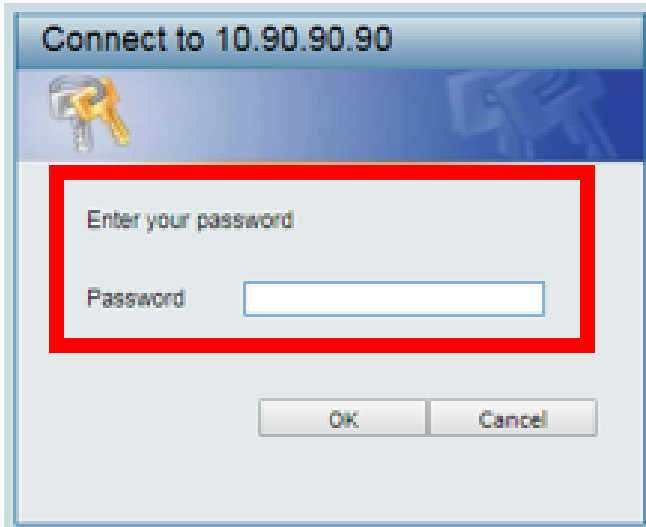

2. L2 Functions > Spanning Tree > STP Global Settings

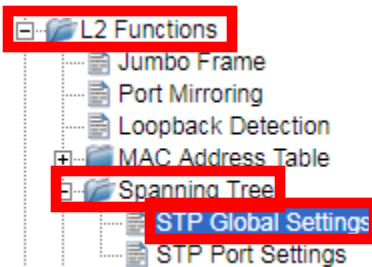

3. Enable spanning tree protocol and apply

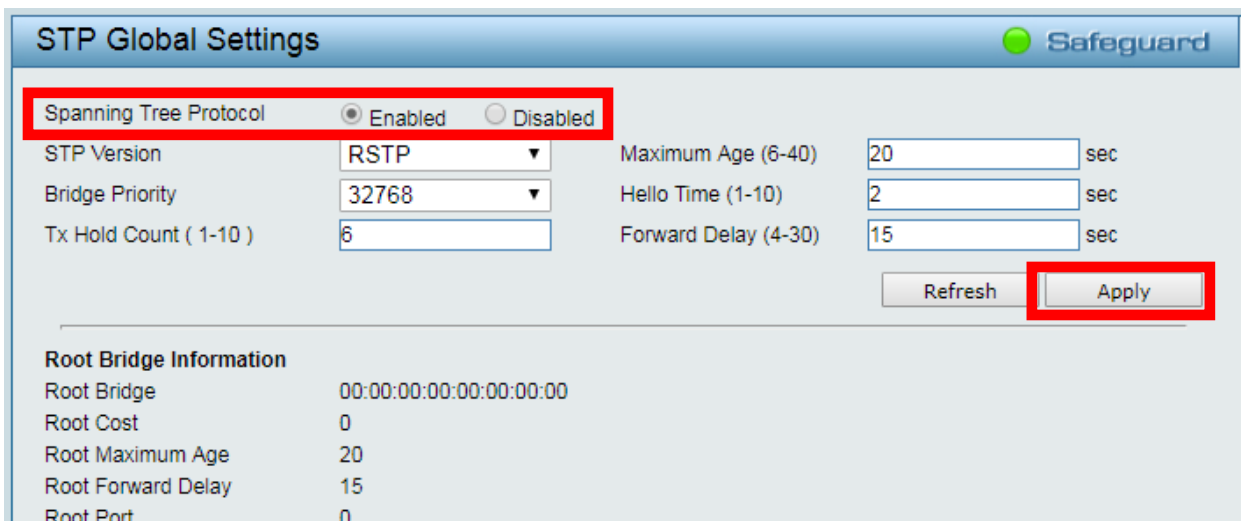

# D-Link<sup>®</sup> Technical Support Setup Procedure

---

4. Save configuration.

