How to setup Access Point (AP) for router DIR-868L

Step 1 Connect the LAN cable from the computer to any of 4 ports of the router.



Step 2 Open a web browser such as Internet Explorer, Mozilla Firefox or Chrome. On the address bar of the web browser type in there the IP Address http://linkrouter.local of the router and then press the Enter key on your keyboard.




Step 3 A login screen will appear, select the *User Name* as "Admin" and leave the *Password* field blank (below firmware version 1.07) and then click on the Log In button.

For the Firmware Version 1.07 and above you need key in default wireless password






Step 4 Click on **SETUP** tab, then Click on **INTERNET** on the left hand side, then Click on **Manual Internet Connection Setup.**

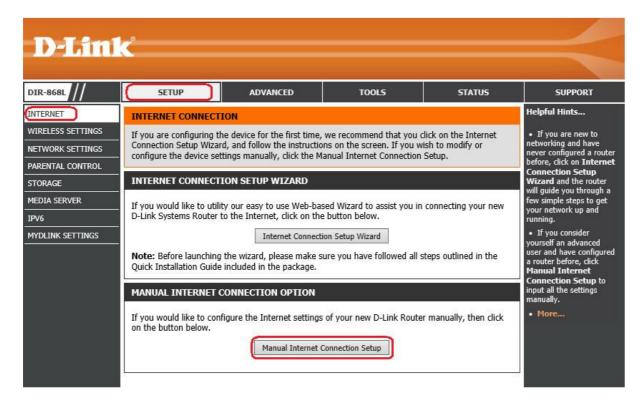

Step 5 By default the router has is Wireless Router. You need change it to Wireless AP.

Step 6 Then click on save settings to continue

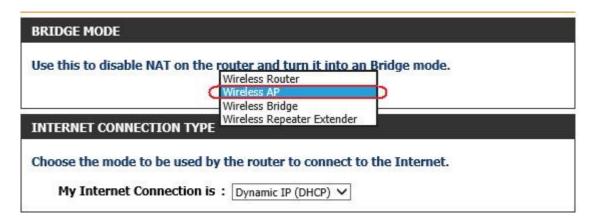

Step 7 It will reboot the router

Step 8 Make sure NO Network Cable is plugged into INTERNET PORT




The device is changing to Bridge mode.

It's rebooting now and management IP address will be changing to '192.168.0.50' or 'dlinkrouter.local'.

Please make sure PC's IP address is in the same IP networking before doing further configuration of device.

Waiting time: 97 second(s)

Step 9 Connect an Ethernet cable in one of the LAN ports of the AP router and connect it to main router. Do not plug anything into the Internet (WAN) port of the router into an AP. Use the LAN ports only.

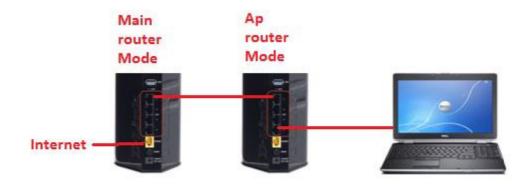

--- END ---