 


- **Firmware 2.07SG - How to login to router menu interface and upgrade firmware**

Step 1: Open an Internet browser (such as Internet Explorer or FireFox) and enter <http://192.168.0.1> into the address bar.




Step 2: Please enter router's login password


If you have not set your own router login password, please leave it BLANK or use the wireless password stated on the label below the router.




D-Link® Technical Support Setup Procedure

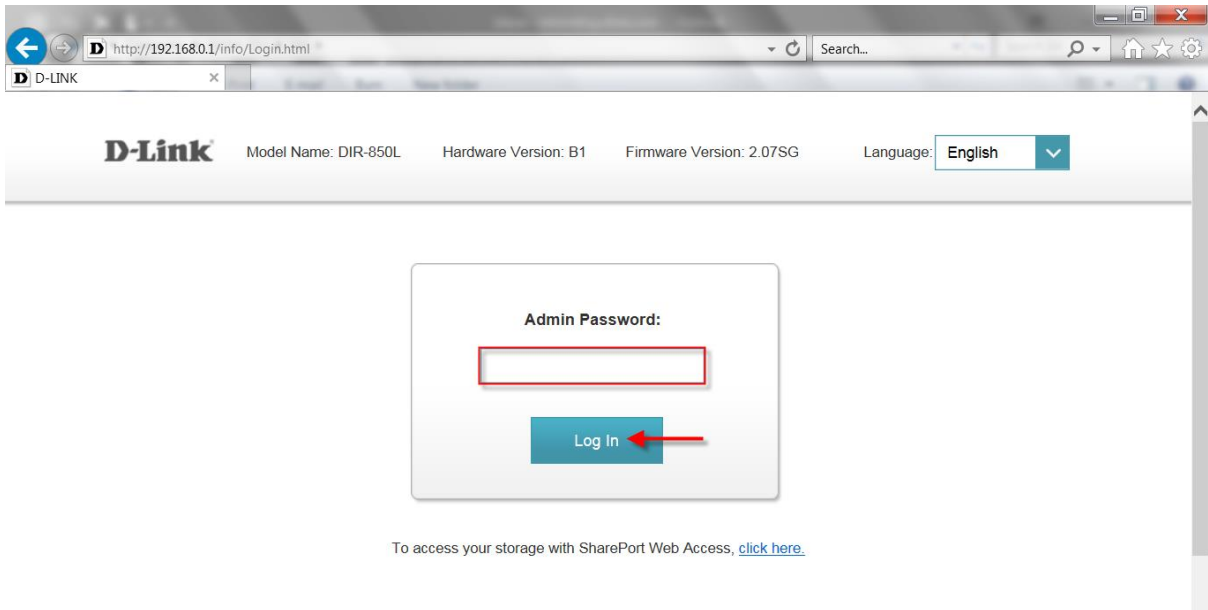


Step 3: Mouse over **Management** tab at the top of the page and then click **Upgrade** from the dropdown list displayed.

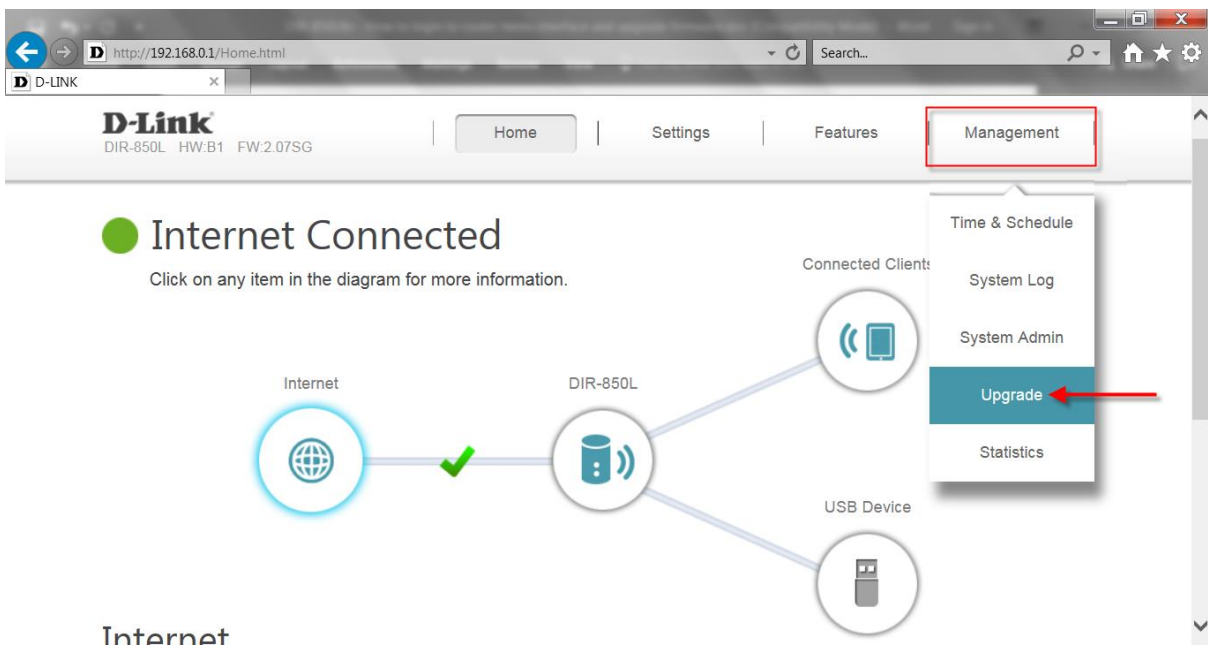


Step 4: Click **Select File**. Ensure the firmware was successfully extracted from the zip contents. Select the desired **BIN** file and click **Open**.

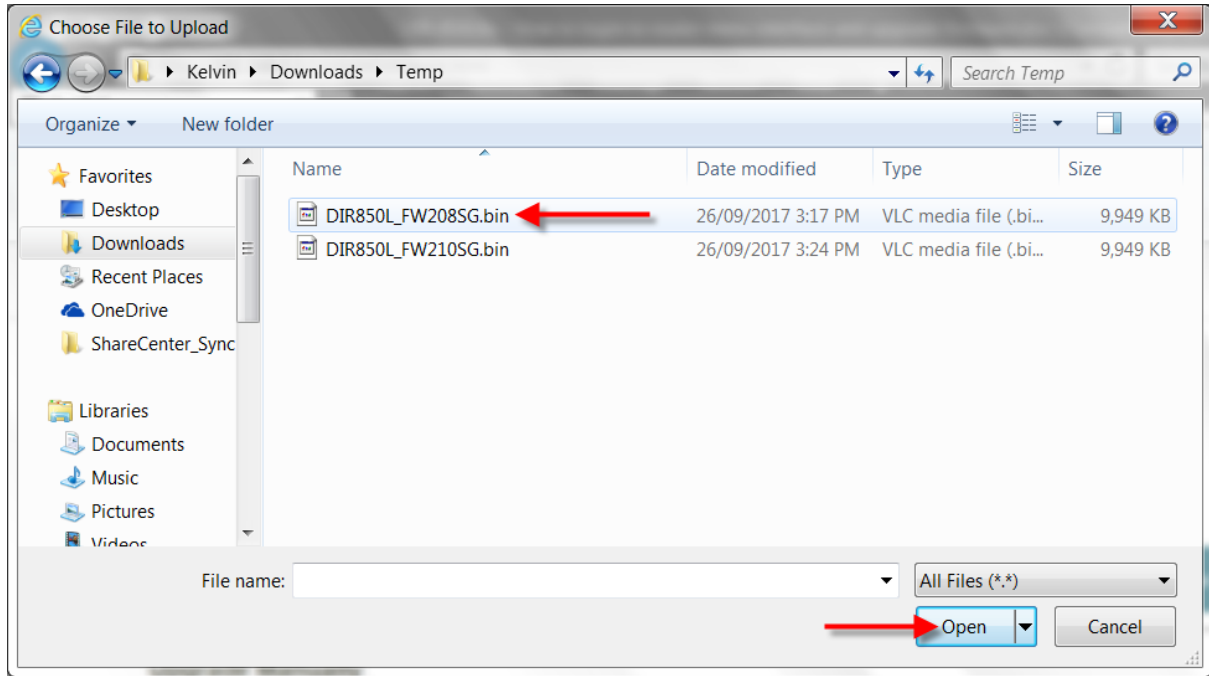


Step 5: Select **Upload** to start the firmware upgrade process. If you encounter “page cannot be displayed” message, refresh the browser page again to initiate the firmware upgrade.

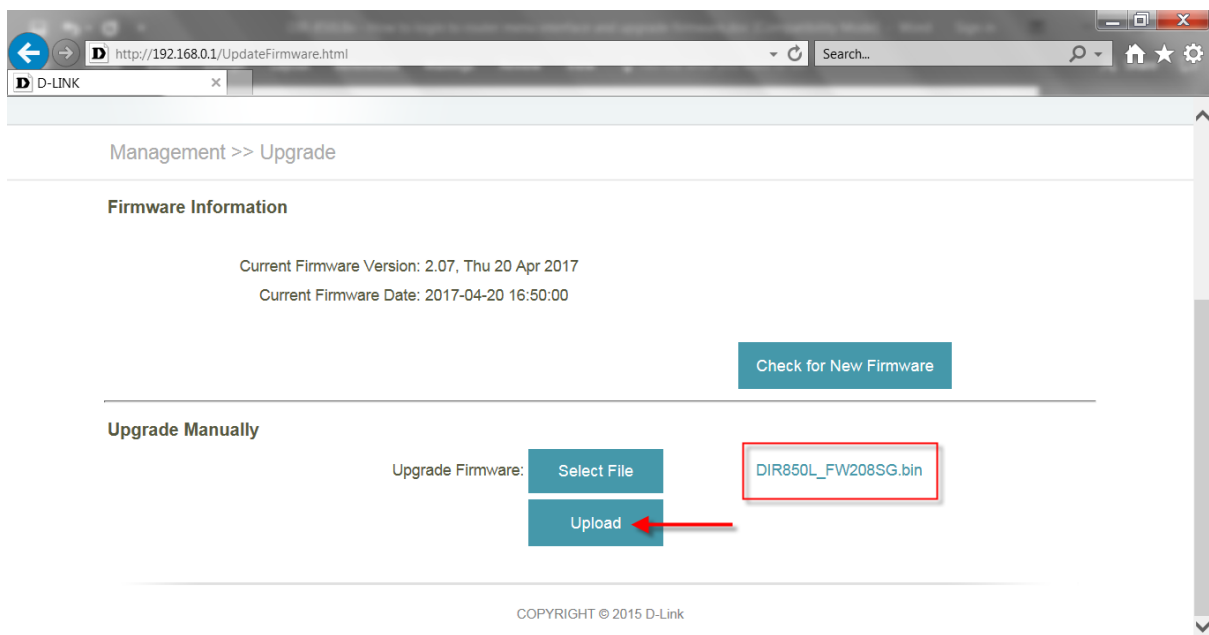


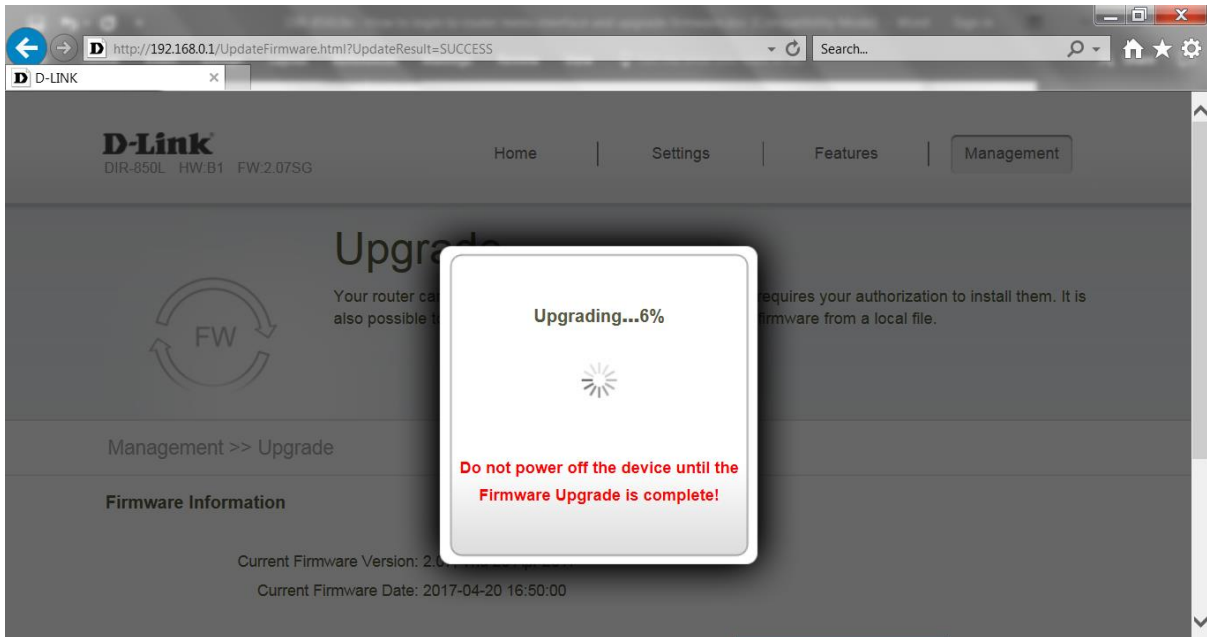


Step 6: Refresh the browser page again to display the router login page. Please login as in Step 2. Otherwise, please enter the router wireless password stated on the *sticker label* at the base of the device (the default login password of the router). Click **Login**.

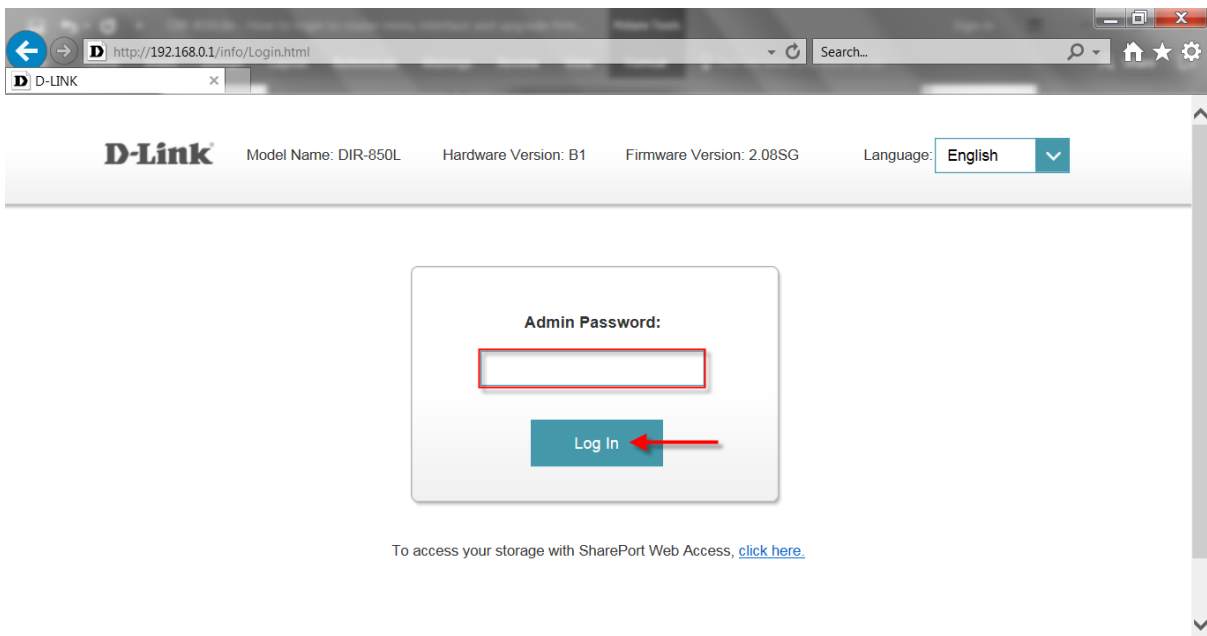



Step 7: Mouse over **Management** tab at the top of the page and then click **Upgrade** from the dropdown list displayed.

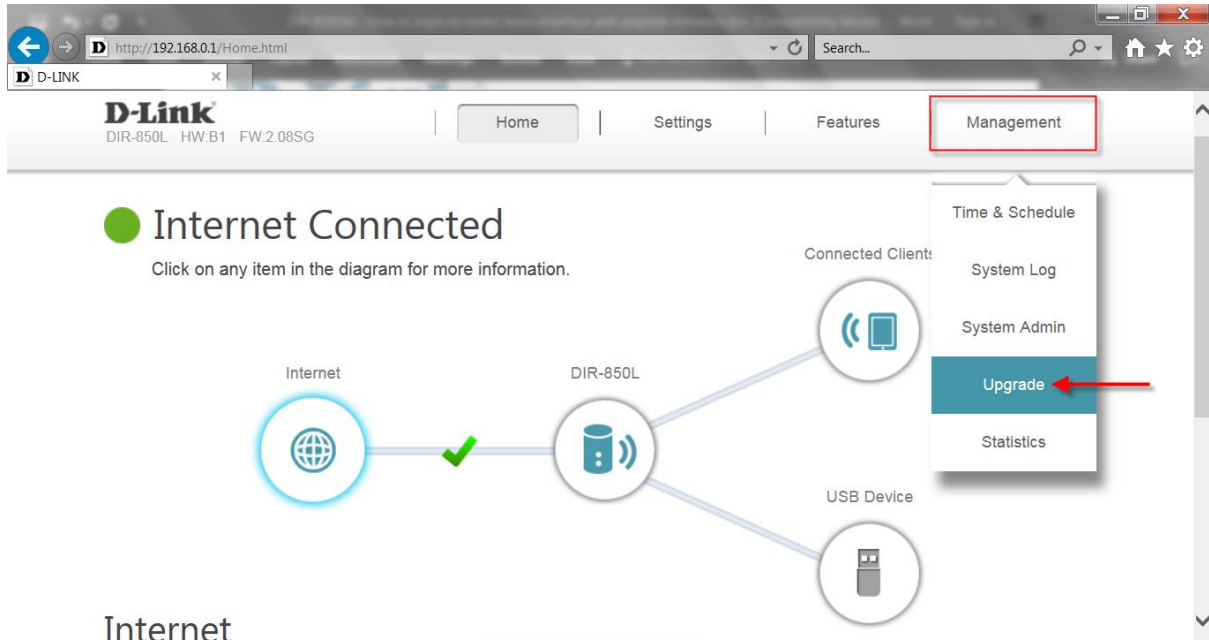


Step 8: Click **Select File**. Ensure the firmware was successfully extracted from the zip contents. Select the desired **BIN** file and click **Open**.

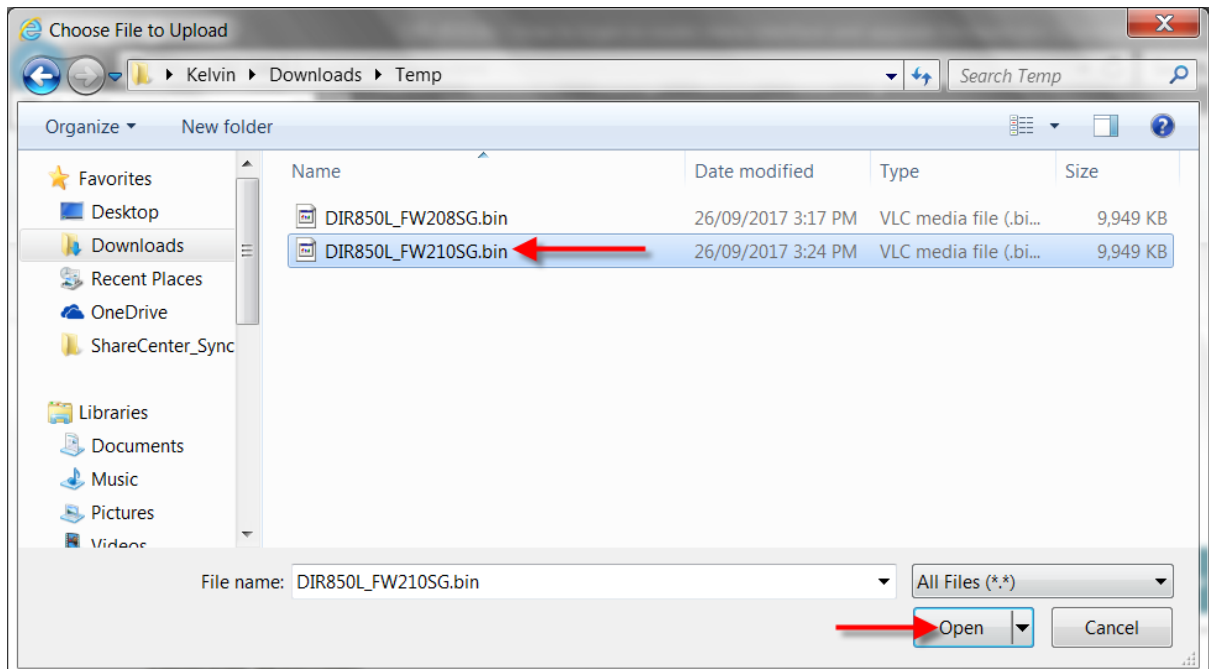

Step 9: Select **Upload** to start the firmware upgrade process. If you encounter “page cannot be displayed” message, refresh the browser page again to initiate the firmware upgrade.

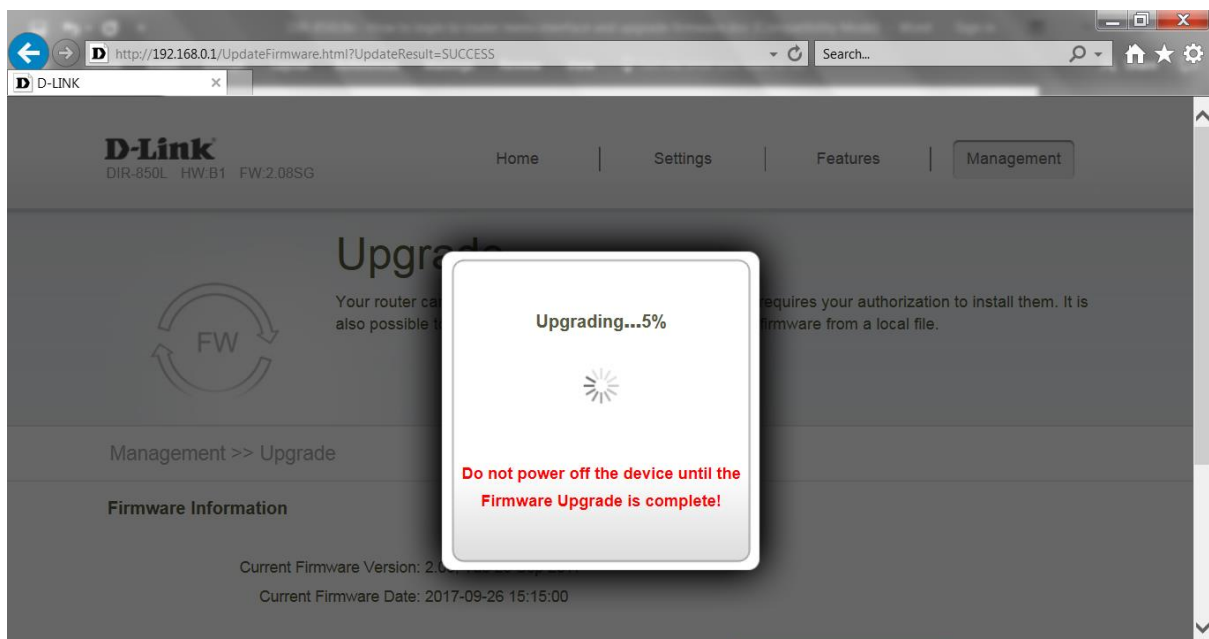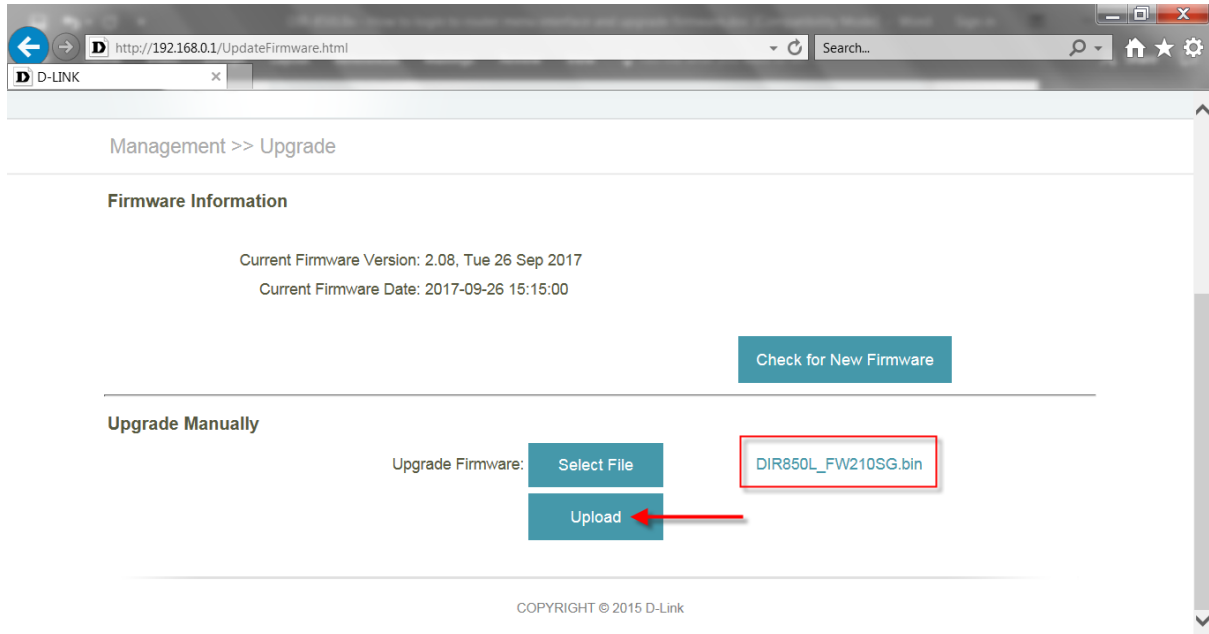

Step 10: Refresh the browser page again to display the router login page. The DIR-850L has successfully been firmware upgraded. Please enter the same password used or the wireless default password. Click **login** to continue to access and setup the router.

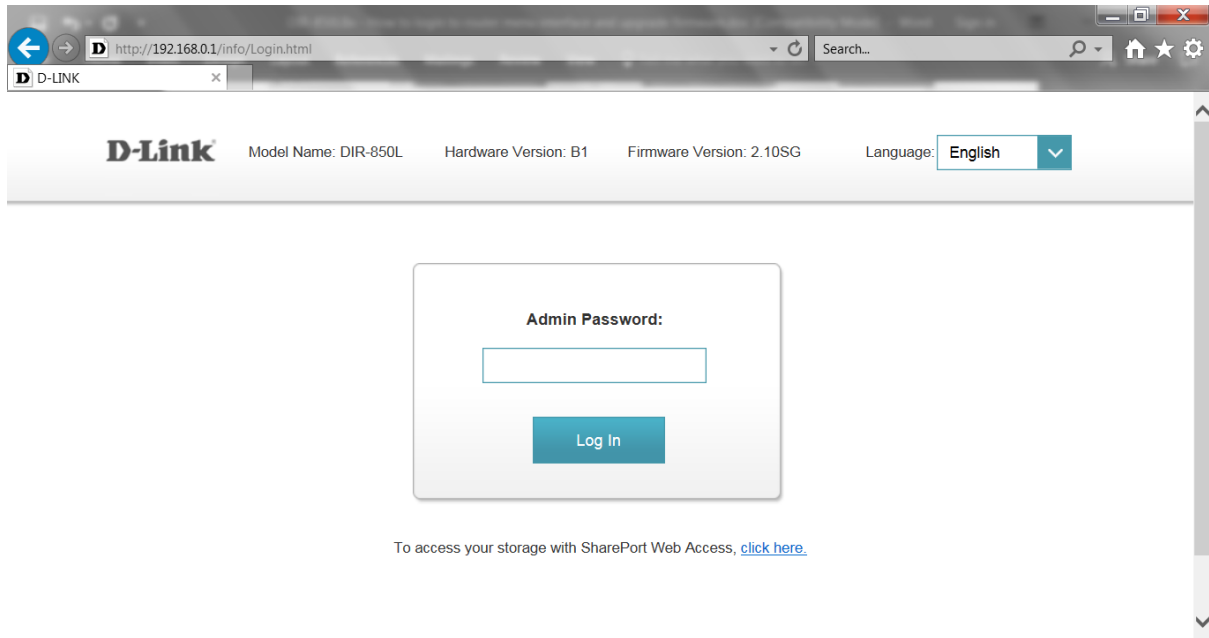

--END--

Note:

For enhanced security, if you do a factory reset on the upgraded router, the default login password will be the same as the Wireless password located at the base of your router

